Datalogic S.r.l.
Via San Vitalino 13
40012 Calderara di Reno (BO)
Italy
Tel. +39 051 3147011
Fax +39 051 3147205

©2012-2018 Datalogic S.p.A. and/or its affiliates

⬩ All rights reserved. ⬩ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation. Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Lynx is a trademark of Datalogic S.p.A. and/or its affiliates, registered in many countries, including the U.S. and the E.U. All other brand and product names may be trademarks of their respective owners.

Support Through the Website

Datalogic provides several services as well as technical support through its website. Log on to www.datalogic.com and click on the **SUPPORT** link which gives you access to:

Downloads by selecting your product model from the dropdown list in the Search by Product field for specific Data Sheets, Manuals, Software & Utilities, and Drawings;

Repair Program for On-Line Return Material Authorizations (RMAs) plus Repair Center contact information;

Customer Service containing details about Maintenance Agreements;

Technical Support through email or phone.

Lynx™ Four Slot Dock



Quick Start Guide

822001293 (Rev. A) Jan. 2018

©2012-2018 Datalogic S.p.A. and/or its affiliates. All rights reserved. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

DATALOGIC

www.datalogic.com

NOTE **Read this manual carefully before performing any type of connection from the terminal to a host PC using the Four Slot Dock.**
The user is responsible for any damages caused by incorrect use of the equipment or by inobservance of the indication supplied in this manual.


The Four Slot Dock paired with a Lynx PDA builds a reading system for the collection, decoding and transmission of barcode data.

The Four Slot Dock can charge both the terminals and the spare batteries at the same time. The spare batteries (both standard capacity battery 94ACC0064 and high capacity battery 94ACC0065) can be charged by inserting them into the slots at the back of the cradle.

The Four Slot Dock comes in two different models, the Charger (94A150037) and the Ethernet (94A150054).

The Ethernet model also provides Ethernet connection for data transfer via local area networks.



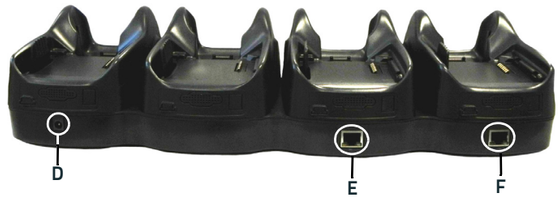

A. Link LED for Ethernet ports 1,2[1]
B. Battery charger LED for slots 1,2,3,4
C. Power on LED
D. Power supply connector
E. Ethernet port 1 (with integrated link and speed LEDs)[2]
F. Ethernet port 2 (with integrated link and speed LEDs)[2]

PDA Insertion/ Removal

For correct insertion into the dock, insert the PDA from the top of the dock and push it down.


To remove the PDA from the dock, simply pull it upwards while holding the dock firmly down.



1. Used in the Ethernet four slot dock only
2. Available in the Ethernet four slot dock only

Power Supply

Each 4SD requires a power supply.

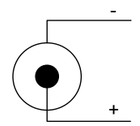

LED Indicators

LED	Status
Power On (F)	
Solid green	Dock is powered.
Battery Charger (B)	
Off	Battery absent.
Solid red	Battery is charging.
Solid green	Charge completed.
Blinking red	Error.

Using the Spare Battery Charger

Insert the battery, contacts side first, into the slot and press it until the battery latch is automatically closed; charging starts automatically.



To remove the battery, press the battery-release lever.



Ethernet Connection[1]

The Ethernet cradle drivers are pre-installed on the Lynx and initiate automatically when the terminal is placed in a properly connected Four Slot Dock Ethernet.

When the PDA is inserted into the Four Slot Dock Ethernet, the connectivity icon on the taskbar indicates that the PDA is connected to a network.

NOTE

The maximum bandwidth capacity for each PDA is 12Mbps.


The yellow Link LED blinks to indicate activity, or stays lit to indicate that a link is established. When it is not lit it indicates that there is no link.

CAUTION

Connections should always be made with power OFF!.

How to Connect

Connect the Ethernet cradle (Ethernet port 1 - E) to an Ethernet hub or to a port on the host device. Connect the Ethernet cradle (power port - F) to the power supply.

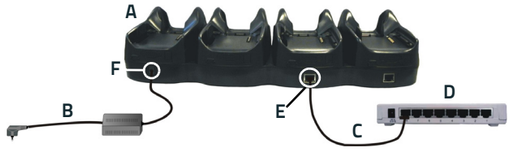


A. Ethernet 4 Slot Dock
B. Power supply without power cord (could not be included in the box).
C. UTP CAT 5E cable (recommended use)
D. Ethernet hub
E. Ethernet port [1]
F. Power port

1. Available in the Ethernet Four Slot Dock only

Daisychaining Ethernet Connection

To connect several cradles to an Ethernet network, the Ethernet cradles may be daisychained. It is recommended not to connect more than 4 cradles in order to maintain the optimal baud rate.

Connect the first Ethernet cradle to the Ethernet Switch. Connect the additional cradles as shown in the figure below.

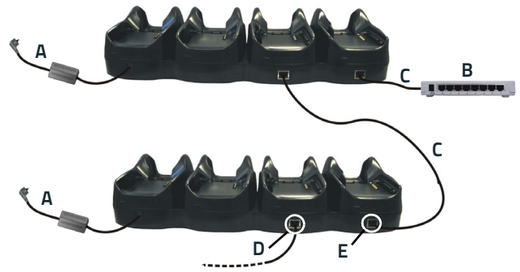

A. Power supply without power cord (could not be included in the box).
B. Ethernet hub
C. UTP CAT 5E cable (recommended use)
D. Ethernet Port 1
E. Ethernet Port 2

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

WARNING

Do not use the cradle in a PoE network, i.e. in a network with PSE able to supply power: there is the risk to compromise, in irreversible way, the functionality of the cradle.

Dock Contacts Cleaning Procedure

All exterior metal contacts/connectors exposed to spills, dirt or debris accumulation require periodic cleaning to ensure best performance during charging and data transmission.

Use a soft, lint-free dry cloth or lens tissue to clean the product (contacts and plastics). An antistatic cloth is preferable but you can also use a cotton cloth. Avoid wool, synthetic cloths or other materials that can cause electrostatic discharges.

If the contacts are very dirty, clean them with a soft cloth moistened with a diluted non-aggressive cleaning solution or a diluted isopropyl alcohol solution (20% maximum). A cotton swab may be used only on hard-to-reach contacts.

Clean the contacts when you see traces of dirt or when you experience solid connection issues between the terminal and its dock (device not charging or intermittent communications). It is however suggested to clean the contacts every 6 months (more often if the environment is dusty).


If the plastic areas are very dirty use only a cloth dampened with water.

CAUTION

Do not use abrasive or aggressive cleaning agents or abrasive pads to clean electric contacts, scan windows or plastics.

Cleaning the Dock Contacts

1. Remove the power cable before cleaning the contacts.
2. Use a soft dry cloth as suggested above. If the product is very dirty, moisten the cloth in a non-aggressive cleaning solution or diluted isopropyl alcohol solution (20% maximum).
3. Gently rub the cloth back and forth ONLY along the contacts, following the directions indicated by the red arrows. Use care not to leave any cloth residue.

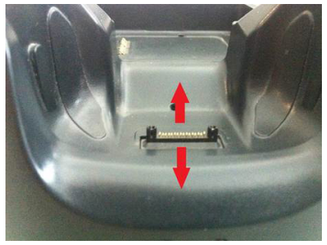

4. Use a dry cloth to remove any dirt near the contacts area and to clean the plastic parts. If the plastic parts of the equipment are very dirty, slightly dampen the cloth with only water.
5. Repeat steps 2, 3 and 4 using a clean dry cloth.
6. Allow the cleaning solution to fully evaporate before powering up the product.

Cleaning the Dock Auxiliary Battery Contacts

1. Remove the power cable and the Ethernet module before cleaning the contacts.
2. Use a soft dry cloth as suggested above. If the product is very dirty, moisten the cloth in a non-aggressive cleaning solution or diluted isopropyl alcohol solution (20% maximum).
3. Gently rub the cloth back and forth ONLY along the contacts, following the directions indicated by the red arrows. Use care not to leave any cloth residue.



4. Use a dry cloth to remove any dirt near the contacts area and to clean the plastic parts. If the plastic parts of the equipment are very dirty, slightly dampen the cloth with only water.
5. Repeat steps 2, 3 and 4 using a clean dry cloth.
6. Allow the cleaning solution to fully evaporate before powering up the product.

Technical Features

Electrical Features	
Power supply[1]	12 VDC ± 5% @ 5A
Consumption	Max 5 A
Spare Slot Charge Time	
Std Battery	2h 30
High Cap Battery	4h
Communication Features	
Interface	Ethernet[2]
Baud Rate	10/100BASE-T
Physical Features	
Dimensions	445 x 135 x 101 mm 17.5 x 5.3 x 4 in
Weight (without cables)	1250 g / 44.1 oz
Indicators	Green power-on LED Bicolored battery charge status LED
Environmental	
Working temperature[3]	0° to +50 °C / +32° to +122 °F
Storage Temperature	-20° to +70 °C / -4° to +158 °F
Humidity	95% without condensation
Electrostatic discharge EN 61000-4-2	4 KV contact / 8 KV air

1. This device is intended to be connected to a UL Listed/CSA Certified Power Unit marked 'Class 2" or LPS power source rated 12 V, 5A. The package may include international plug adapters. The adapters must be plugged in the power supply before the power supply itself is plugged on the wall outlet.
2. Available in the Ethernet Four Slot Dock only.
3. When inserted in the spare slot, batteries must be charged at a temperature ranging from 0° to 44 °C. Never charge the main device or spare batteries in a closed space where excessive heat can build up.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use the equipment. This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.